

ReSpeaker Pro Case Assembly Instructions

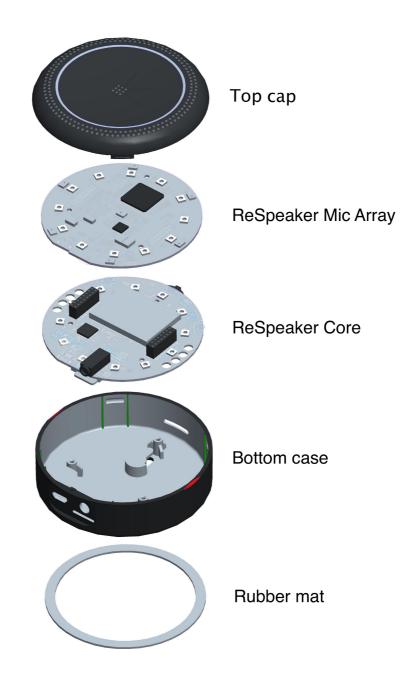


Step 1. Install ReSpeaker Core into the bottom case

- 1. Tilt ReSpeaker Core and install the navigator button into the hole.
- 2. Spin ReSpeaker Core to put it down.

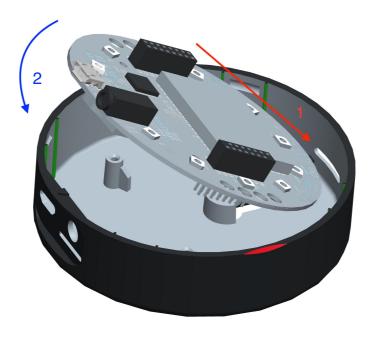


Step 2. Fix ReSpeaker Core with 3 screws

• Make sure the audio jack and Micro-USB port on the board align with the holes on the bottom case.

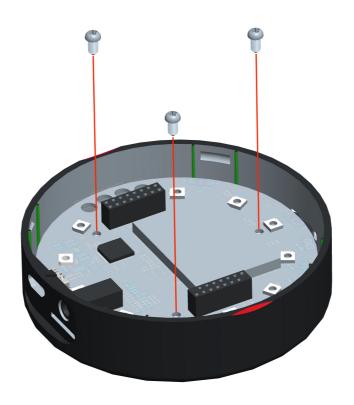

Step 3. Insert ReSpeaker Mic Array

• Please confirm the insertion direction of ReSpeaker Mic Array.

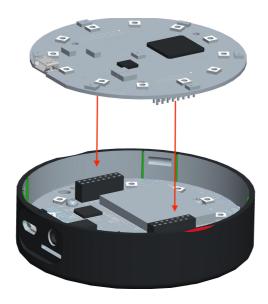

Step 4. Snap the top cap

• Align the alignment marks on the top cap and bottom case, snap them together.



Step 5. Stickup rubber mat

- Tear off the PET sheeting on the rubber mat.Stickup the rubber mat to the bottom case and make align it with the red circle.

